


Pherocon® 1CP Assembly Instructions



1. Remove one folded top section, one folded bottom section (with grid and glue on inside surface), one wire hanger, and one lure packet from the kit box. If using Pherocon L2 lures, also remove one lure holder.
2. Open top section (larger of the two sections) and fold outer triangle-shaped areas inward (toward the side without printing). Crease folds along score marks by folding top section until flat. Allow top section to open naturally to form correct shape as shown. Follow these same steps and fold the bottom section inward (toward the glue-coated side). Be sure front edges are straight, not bowed.
3. Place one Pherocon lure directly in the center of bottom section. Or, if using Pherocon L2 lures, insert into Hole A in the lure holder and secure firmly.
4. Straighten wire hanger and insert ends through Holes B and C in top section. Weave wire ends through Holes D and E from the inside. Push wire hanger all the way through until it is resting on top of the trap.
5. If using Pherocon L2 lures, slide the lure holder on one wire end through Hole F and position lure in the center of trap.
6. Insert ends of wire hanger into Holes G and H in bottom section. Weave wire ends through Hole I and J from inside.
7. Push top and bottom sections together. The bottom section should fit inside the top section. Bend ends of the wire inward and under the trap.
8. To hang the trap in a tree, wrap braided portion of the wire securely around a tree limb.
9. Place trap in orchard according to location and density recommendations.



Top

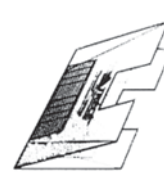

Bottom





Wire Hanger





Lure Packet



Lure Holder

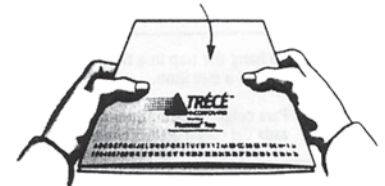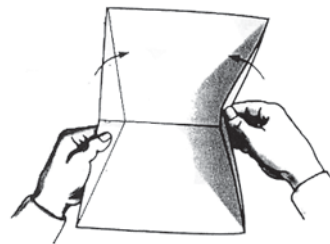

Front Edges

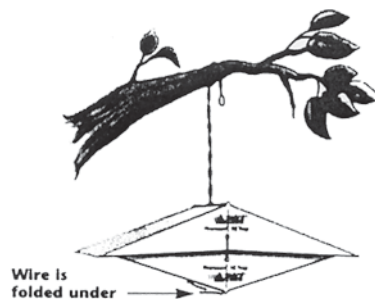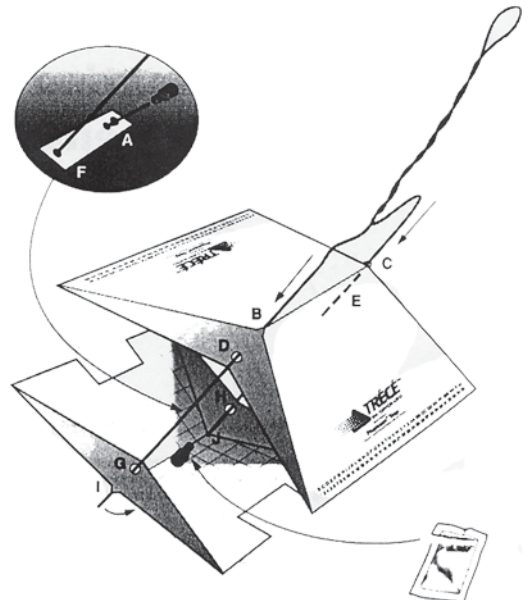

Distributed by:
Great Lakes IPM, Inc.
10220 Church Rd NE
Vestaburg MI 48891

989-268-5693
989-268-5911
FAX: 989-268-5311

www.greatlakesipm.com
E-mail: gliipm@greatlakesipm.com