


Pherocon® Delta IID

Assembly Instructions



TRAP ASSEMBLY INSTRUCTIONS

Fold both long edges of the trap along the lines provided. Bend the sides of the trap up, ensuring that the end panels slope inward when the delta shape is formed. Place lure in middle of the bottom of sticky trap. The larger top tab is then folded over the shorter tab, as shown in the diagram.

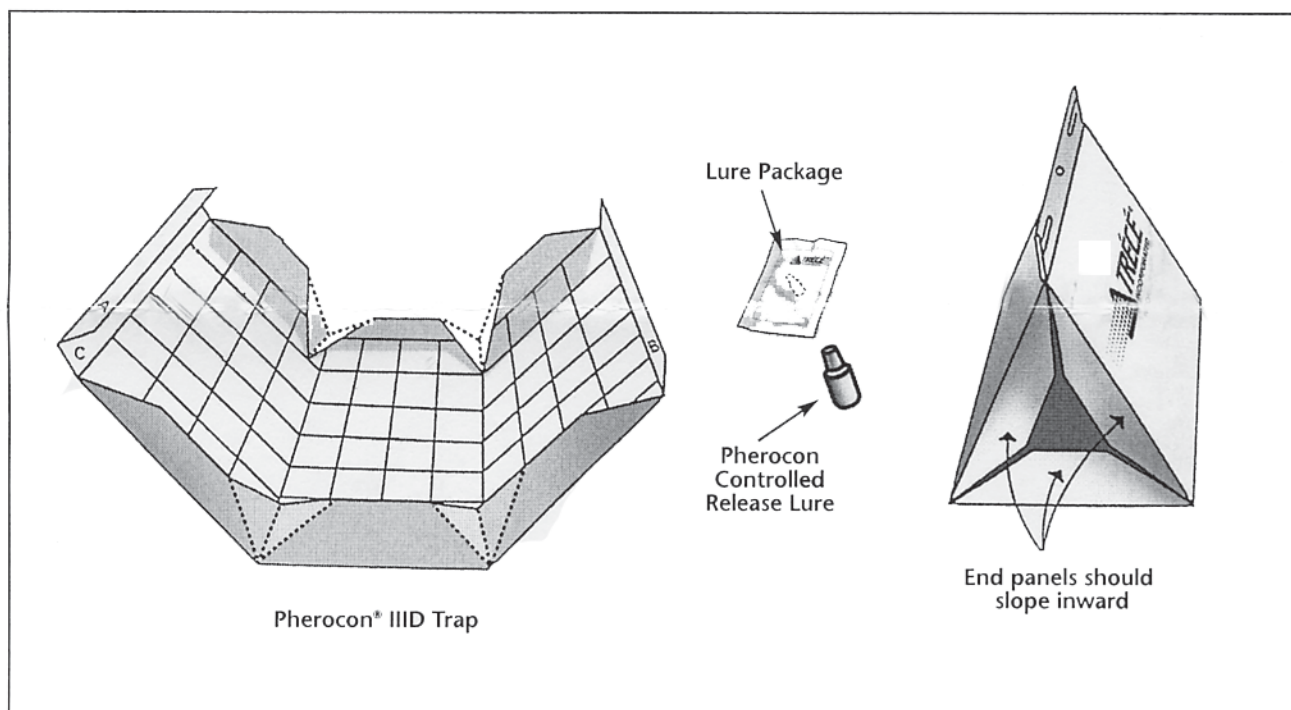

Distributed by:
Great Lakes IPM, Inc.
10220 Church Rd NE
Vestaburg MI 48891

989-268-5693
800-235-0285
FAX: 989-268-5311

www.greatlakesipm.com
E-mail: glipm@greatlakesipm.com

