





## Scentry™ Delta Trap Assembly and Use Instructions

1. Remove one trap (packed in twos, must be separated) and one envelope containing one pheromone lure.
2. Remove one pheromone lure from envelope. Place in trap:
  - a). Adhere insect lure to either of the side panels as shown.OR
  - b). Place lure in lure holder. For fiber lure, remove backing and stick lure to end of lure holder that has two large holes. Rubber septa or capsule type lures are placed in either of the larger two holes. See reverse side for description of lures and lure holder.

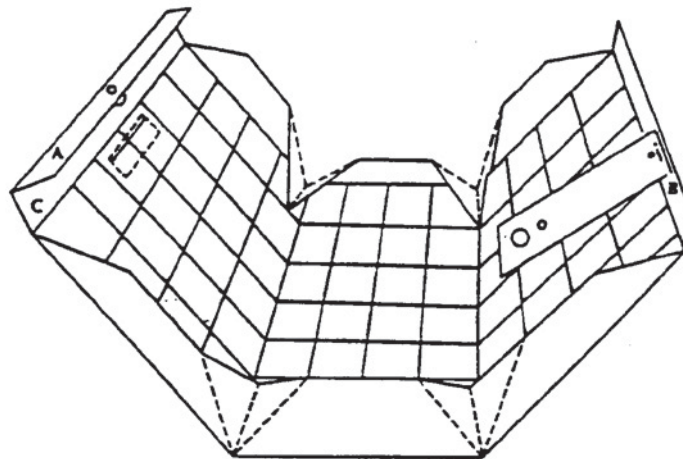

3. Secure lure holder to trap. Staple the end of the lure holder with one small hole to top panel (B) leaving end with two larger holes free.
4. Fold along creased and perforated lines with panels sloping inward.
5. Form triangle shape.
6. Sandwich top panel (B) between top panels (A) and (C). Secure with paper clips as shown. Insure end panels of trap slope inward.
7. Attach trap securely to suitable support (tree, wood stake, etc.) so that it will not move during windy periods, but may be easily removed for inspection and servicing.

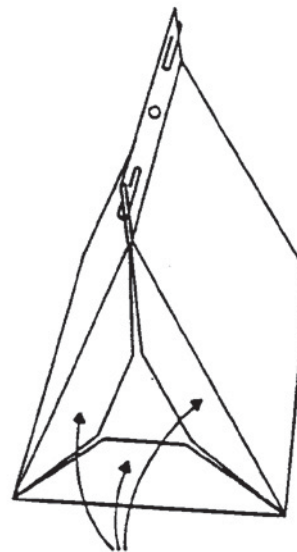

End panels should slope inward.

### Note:

1. Upon receipt, pheromone lures should be stored in a refrigerator or freezer.
2. To avoid cross-contamination of traps and lures, only handle the traps and lures for one specific insect species at a time. Thoroughly clean hands and working surfaces before assembling and baiting traps for other species.

### Distributed by:

Great Lakes IPM, Inc.  
10220 Church Rd NE  
Vestaburg MI 48891

989-268-5693  
800-235-0285  
FAX: 989-268-5311


www.greatlakesipm.com  
E-mail: [glimp@greatlakesipm.com](mailto:glimp@greatlakesipm.com)

# LURE ATTACHMENT


## Kinds of Scentry™ Lures



Rubber Septum



Capsule

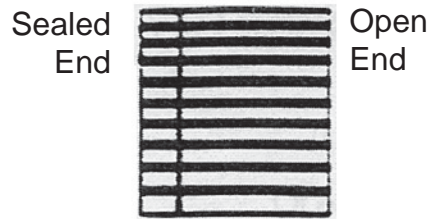


Fiber



Medallion

Lure Holder

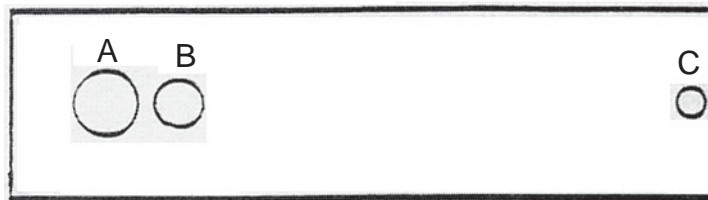

## Placement in Scentry™ Wing Trap Without Lure Holder

Remove one pheromone lure from envelope.

Fiber lure: Remove backing and adhere lure to the inside surface of the trap top.

All other lures: Place on sticky bottom surface of the Wing Trap, taking care not to coat the surface of the lure with the sticky from the trap.

## Placement in Scentry™ Wing Trap Using Lure Holder

Remove one pheromone lure from envelope.

Rubber Septum: Fit into either A or B of lure holder.

Capsule: Fit small end of capsule into B of lure holder.

Fiber: Remove backing from lure and adhere to end of lure holder covering A/B.

Medallion: Staple or paper clip Medallion to end of lure holder covering A/B.