


BioLure® ORANGE LPD TRAP

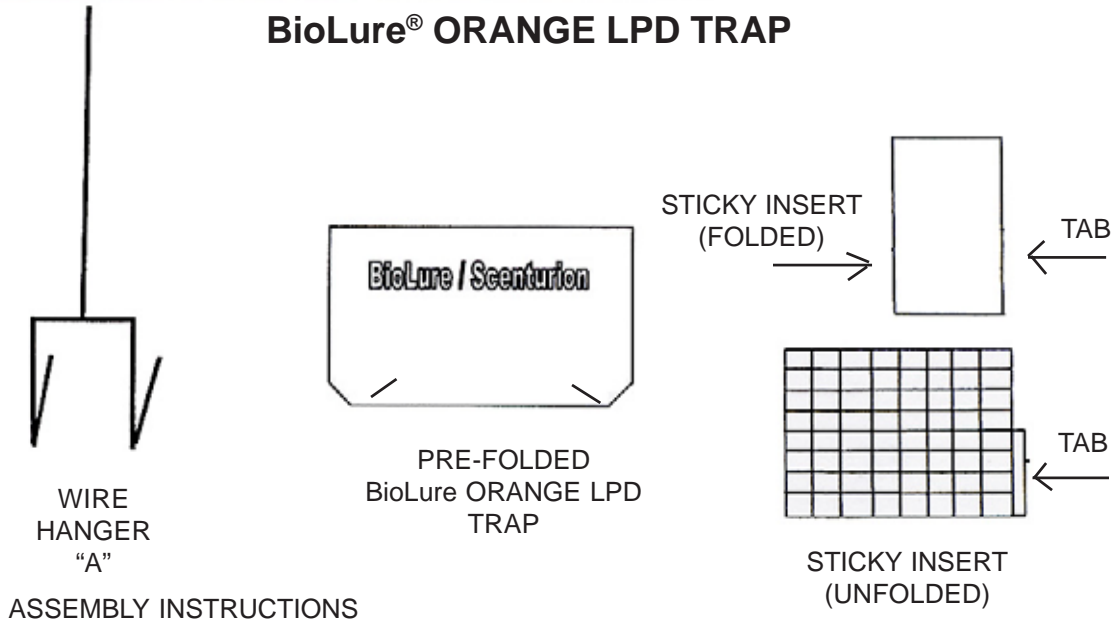

ASSEMBLY INSTRUCTIONS

The BioLure® ORANGE LPD Trap consists of: pre-folded ORANGE LPD trap, wire hanger, and sticky insert.

1. Open the pre-folded ORANGE LPD Trap to form a "delta" (triangle) shape. NOTE: If a BioLure® lure is used in the trap, affix the lure to the trap before placing the sticky insert into the trap. Activate the BioLure® lure according to directions. Remove the brown paper backing on the back of the lure to expose the sticky adhesive. Attach the lure inside the trap to one of the sides.

2. Sticky insert: Bend the tab over the folded sticky insert to form a crease. (See diagram of folded sticky insert). Unfold the sticky insert to expose glue. Grasp the tab and slide the opposite end of the insert into the trap bottom (sticky side up).

3. Fold the trap end flaps up and insert them into the diagonal slots as shown in diagram.

4. Bend the wire hanger as illustrated in "A" (above). Thread the wire tips through both holes in the sides of the trap and secure as shown in diagram to the right ("B").

NOTE: If a Scenturion® septa lure is used in the trap, remove the septa from its packaging and place it onto the glue in the sticky insert.

